
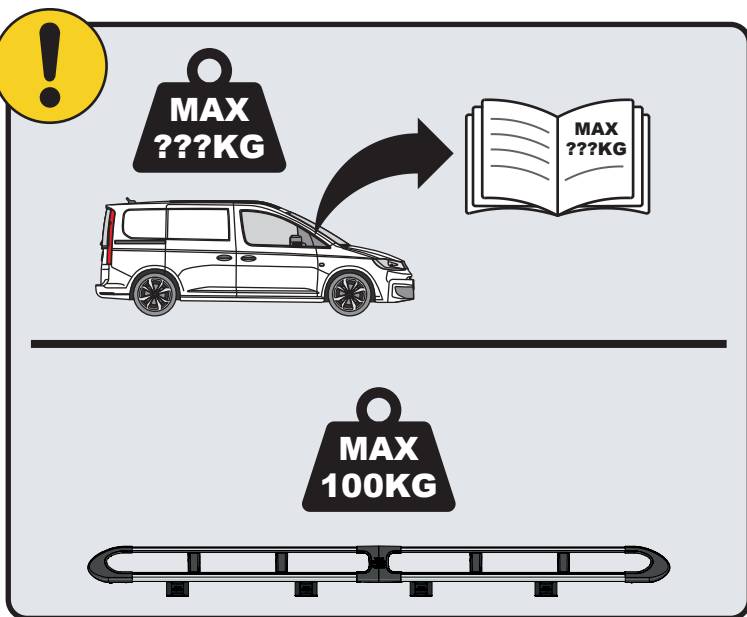


IN8368

ULTI Rack+

2

**VAN
GUARD**


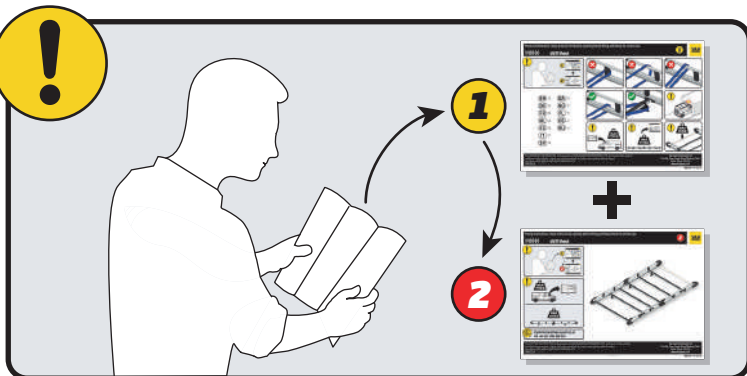


This FITTING INSTRUCTION is the property of VAN GUARD ACCESSORIES LTD. and must not be used for manufacturing purposes, copied nor communicated in any way to third parties without written permission from VAN GUARD ACCESSORIES LTD.
IN8368_A (CN:NR)

Van Guard Accessories Ltd
Fair Oak Close, Exeter Airport Business Park,
Exeter, Devon, EX5 2UL
www.van-guard.co.uk

VGUR-289

Volkswagen Caddy 5: 2021 on
L2H1 (MAXI)
Twin Rear Doors

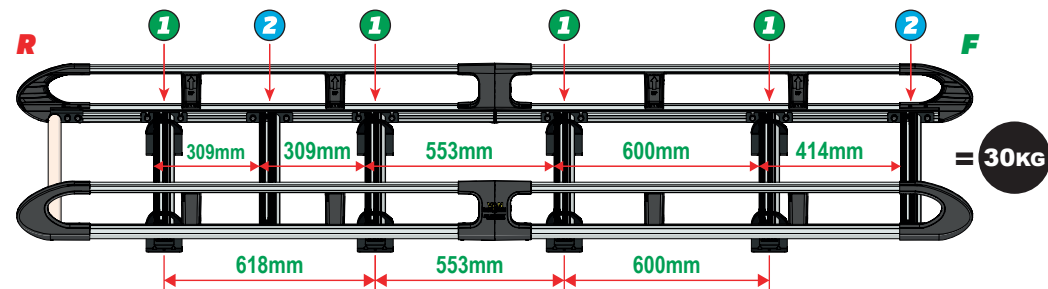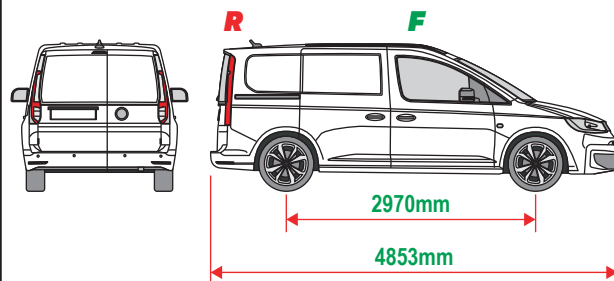


SUPPLIED COMPONENTS - CHECK ALL PARTS ARE PRESENT AND CORRECT BEFORE PROCEEDING (1 OF 2)

TOOLS REQUIRED


10MM X1




13MM X1

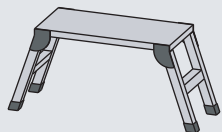


AS3537 X2
(2600 / A)

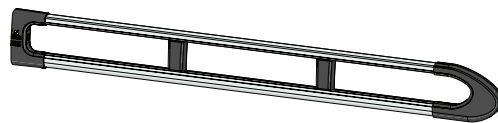


MA6118 X12




FX4241 X28



ME1622 X2




AS3536 X2
(2600 / B)




FX4008 X1




MA6145 X1



ME1623 X2



ME1626 X6
(1264mm)




FX4001 X2
(M8X40)




FX4235 X24
(M5X25)




ME0203 X8




AS3158 X1
(1250mm)




MA6007 X4




FX4248 X1
(T25)




MA6065 X8

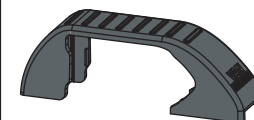


AS3590 X1

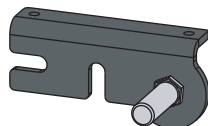


MA6093 X12



FX4239 X28
(M8X20)




ME1620 X4




FX4016 X16
(M6)



AS3591 X1




ME0316 X12




FX4240 X28
(M8)




ME1621 X4



FX4042 X16
(M6X16)



ME1678 X1

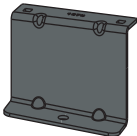


FX4019 X8

(M8)




ME1679 X1

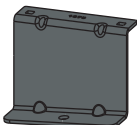


FX4028 X8

(M8X25)




ME1680 X4




FX4040 X8


(M8)

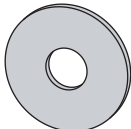


ME1681 X1

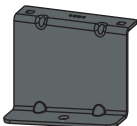

MA6018 X8



ME1682 X1

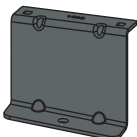

FX4014 X8




01

1L



X4

1R



X4



2L





X2

2R



X2

02

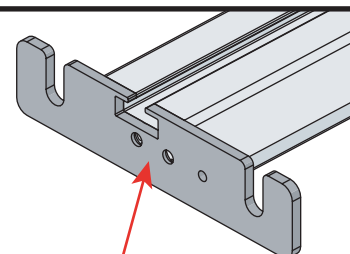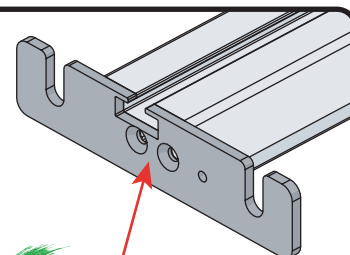


03

01


FX4248




+

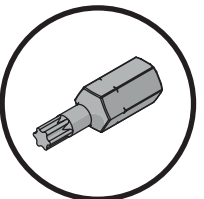

02

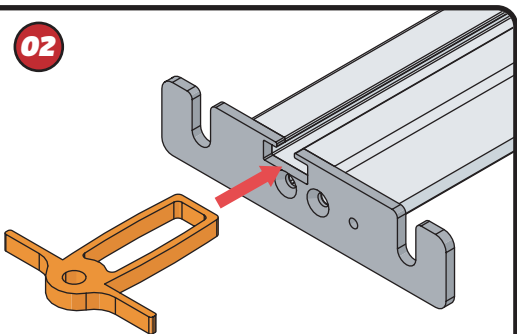

04

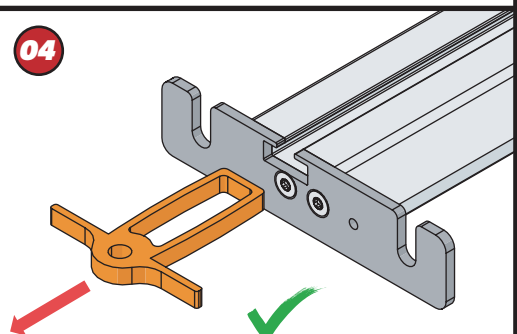


04




1

X4

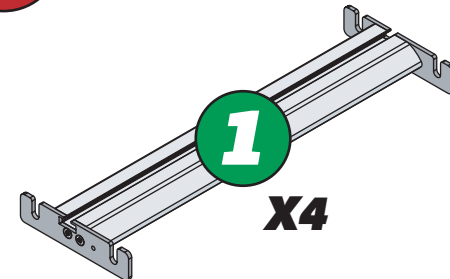

2




X2

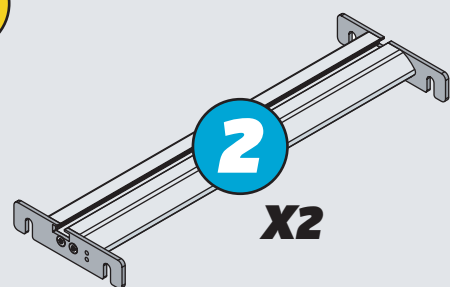


03




11Nm

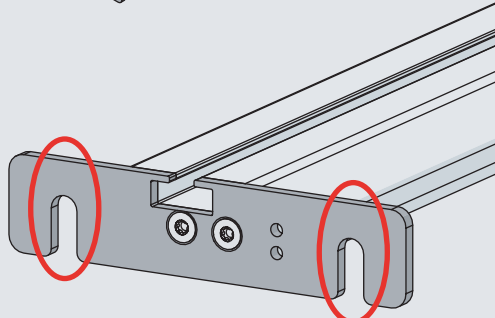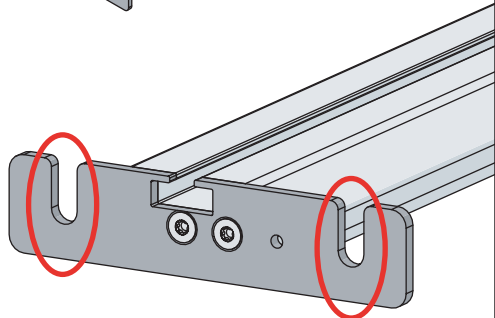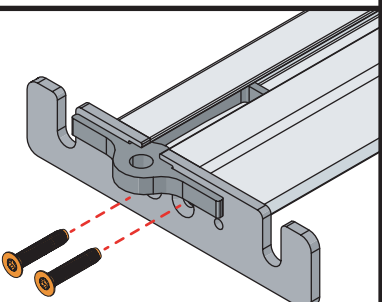


05

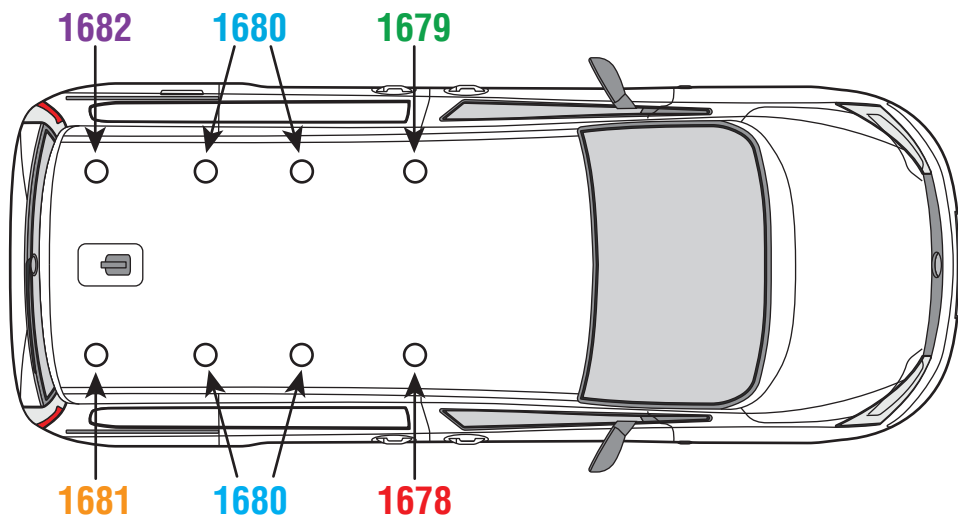


1678

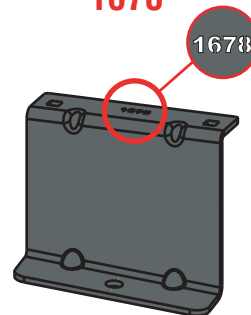


1679

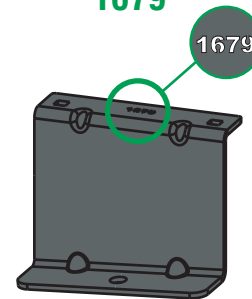


1680

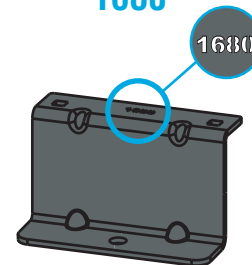



1681

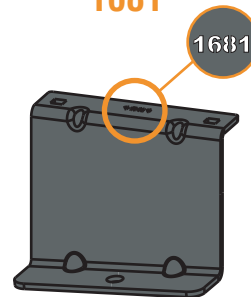

1682

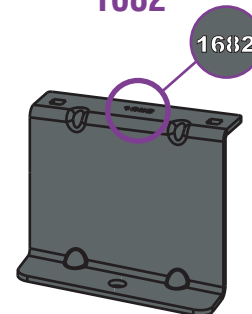



06

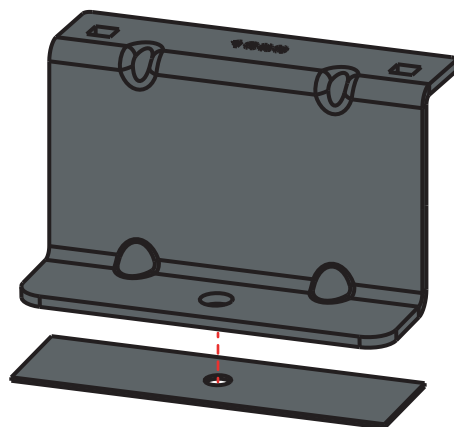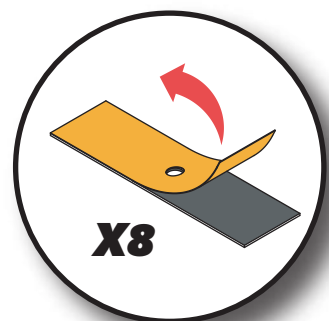


EN - STICK GASKETS TO ALL BRACKETS
 DE - KLEBEN SIE DIE DICHTUNG AN ALLEN HALTERUNGEN
 FR - COUSSINETS ADHÉSIFS À TOUS LES SUPPORTS
 NL - PLAK PAKKING OP ALLE BEUGELS
 ES - PEGA LAS ALMOHADILLAS A TODOS LOS SOPORTES
 IT - ADESIVI GUARNIZIONI A TUTTE LE STAFFE

SV - FÄST GUMMI PÅ ALLA FÄSTEN
 DA - KLÆB GUMMI PÅ ALLE BESLAG
 NO - PLIST GUMMI PÅ ALLE BRACKETTER
 PL - NAKLEJ USZCZELKI DO WSZYSTKICH WSPORNIKÓW
 CS - PŘILEPTE TĚSNĚNÍ NA VŠECHNY DRŽÁKY


07

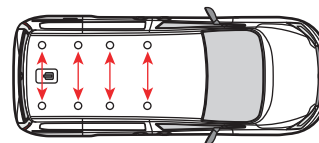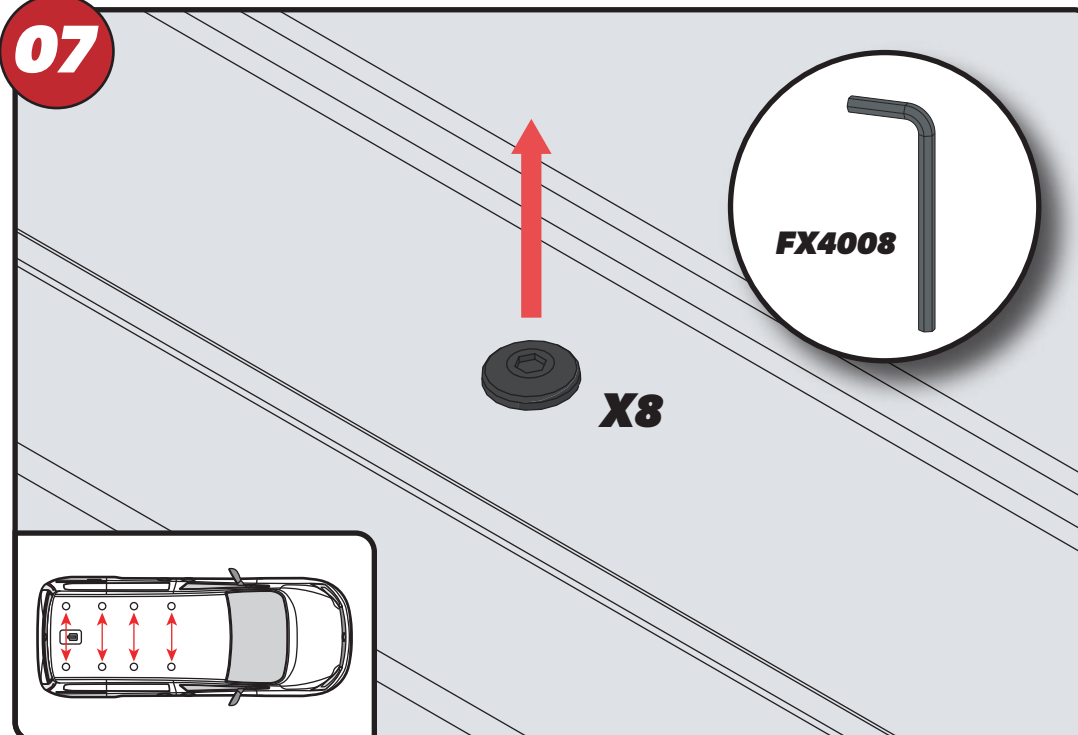


08

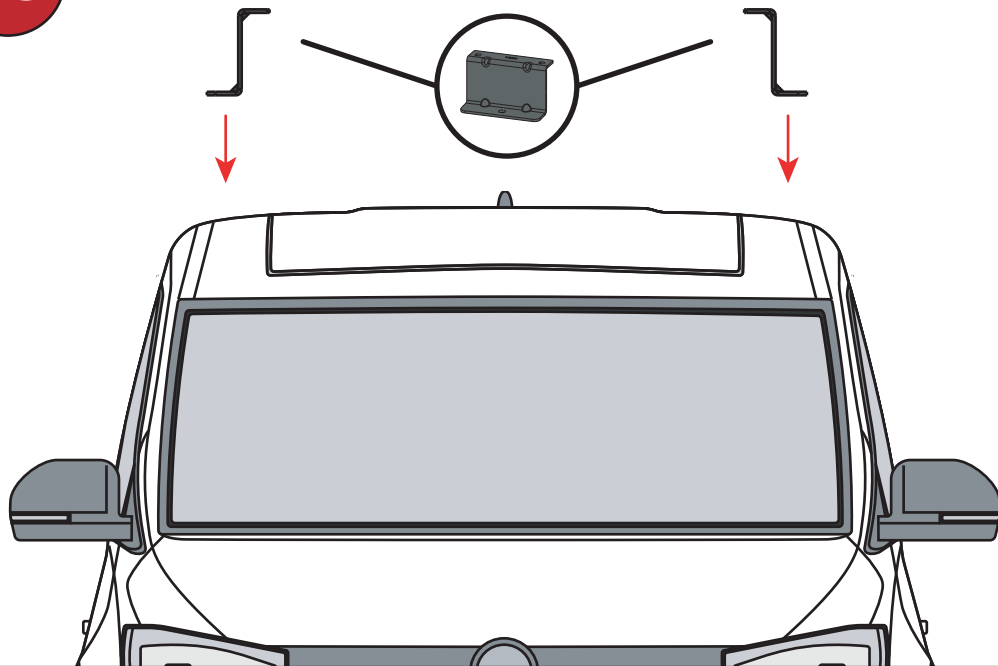


09

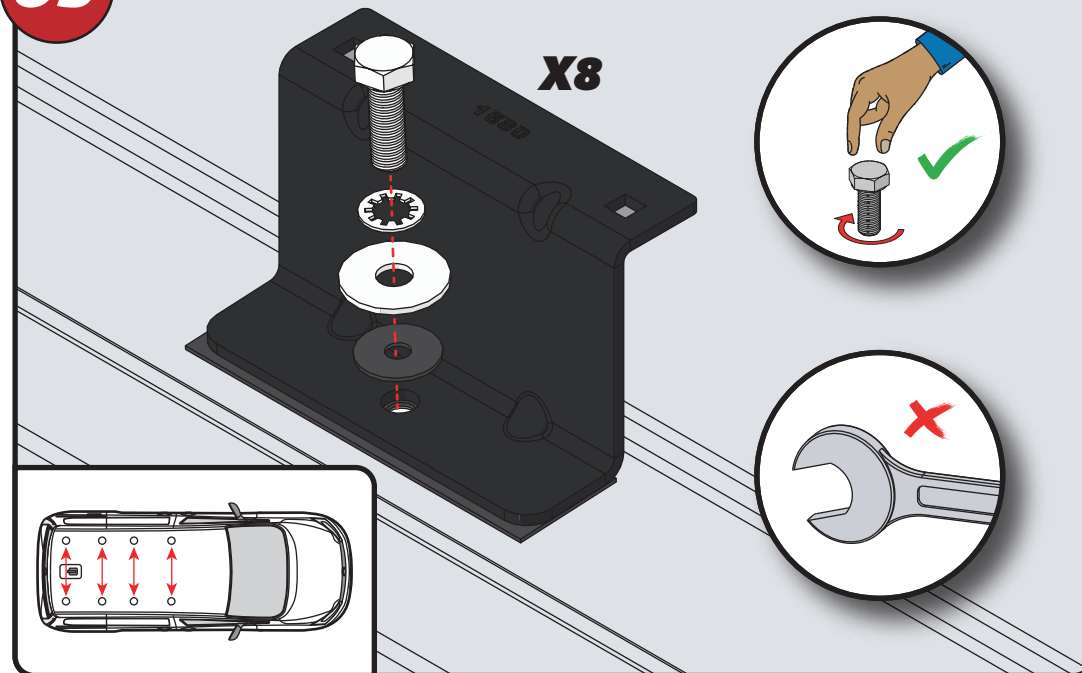

10

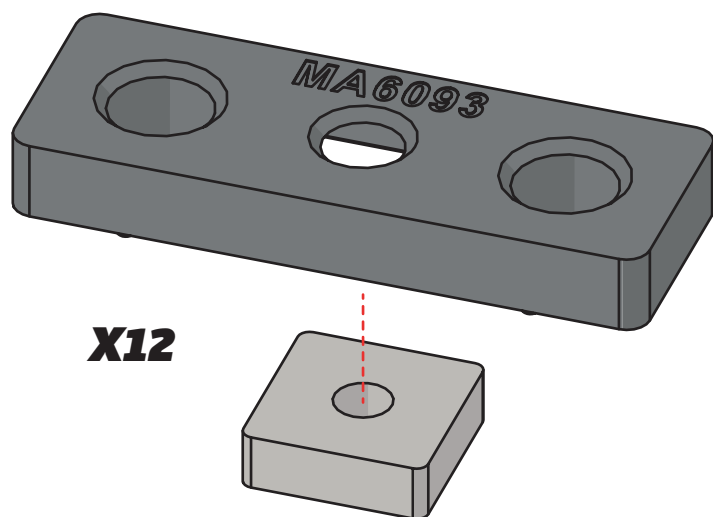



11

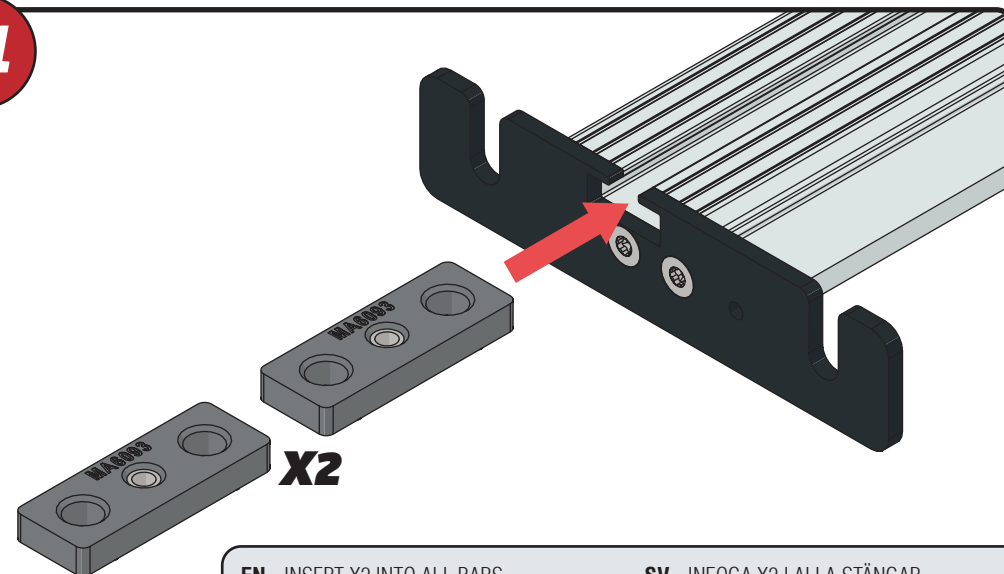





EN - INSERT X2 INTO ALL BARS
DE - X2 IN ALLE STANGEN EINFÜGEN
FR - INSÉRER X2 DANS TOUTES LES BARRES
NL - PLAATS X2 IN ALLE BARS
ES - INSERTAR X2 EN TODAS LAS BARRAS
IT - INSERIRE X2 IN TUTTE LE BARRE

SV - INFOGA X2 I ALLA STÄNGAR
DA - INDSÆT X2 I ALLE STÆNGER
NO - SETT X2 INN I ALLE TAKSTENGER
PL - WSTAW X2 DO WSZYSTKICH PRĘTÓW
CS - VLOŽTE X2 DO VŠECH TYČÍ


12

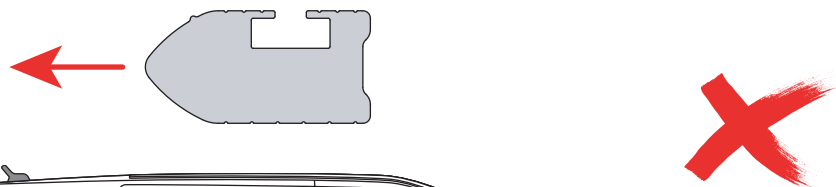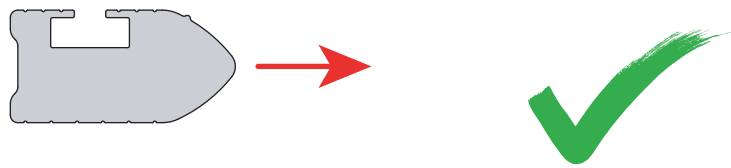


13

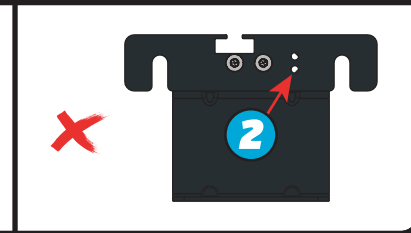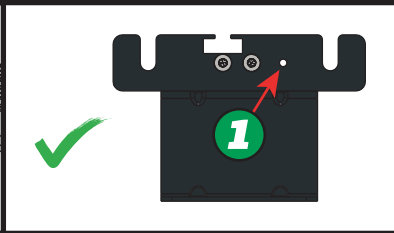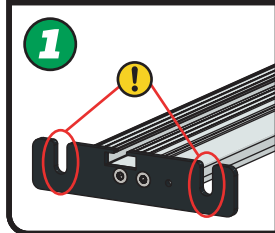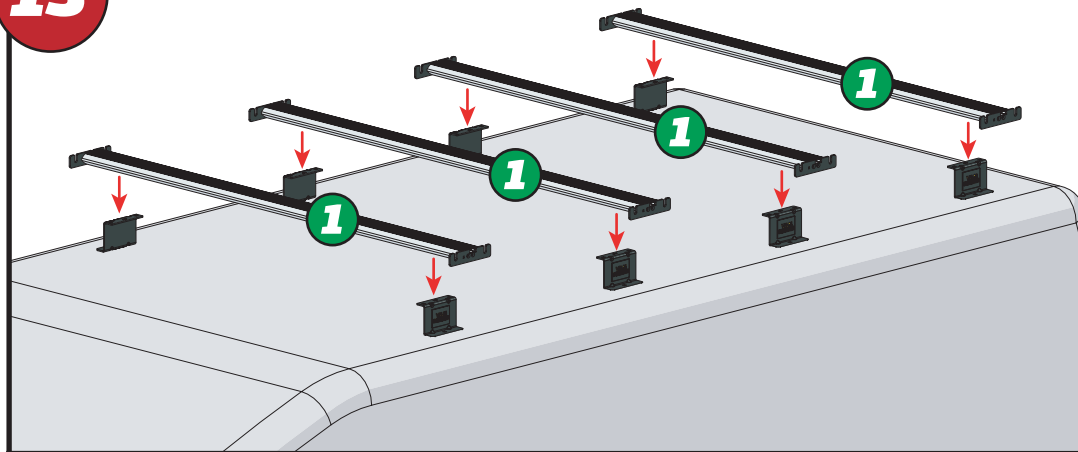




14

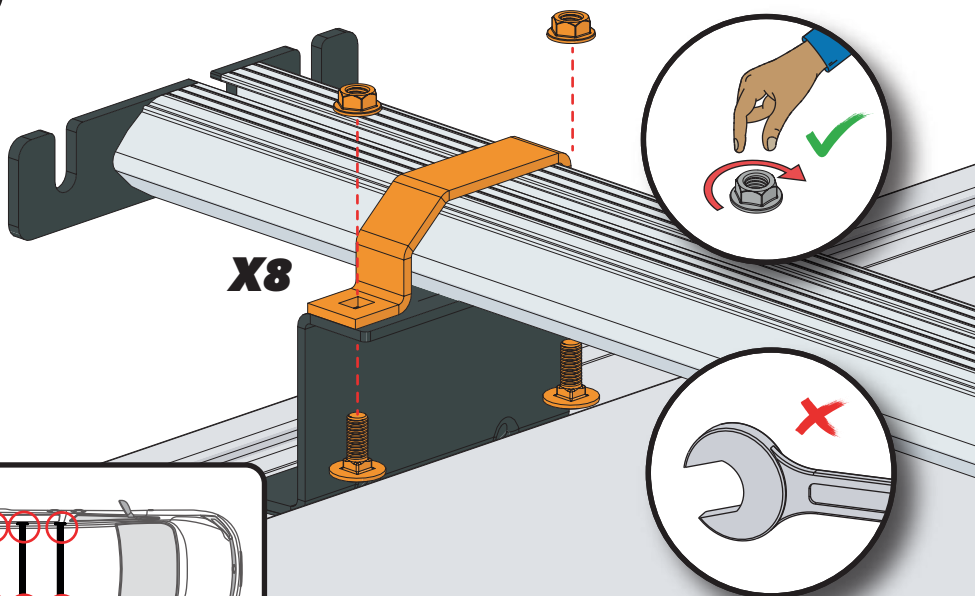


15

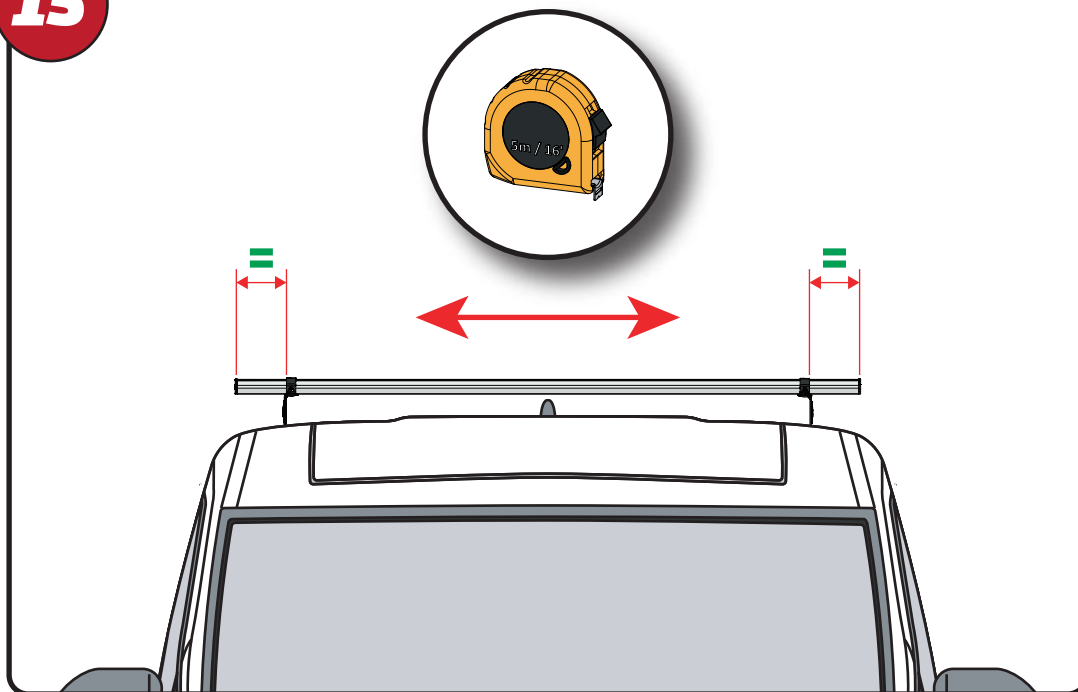


16

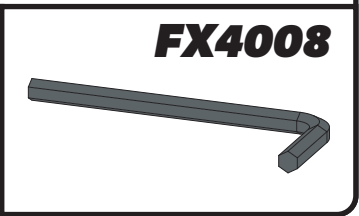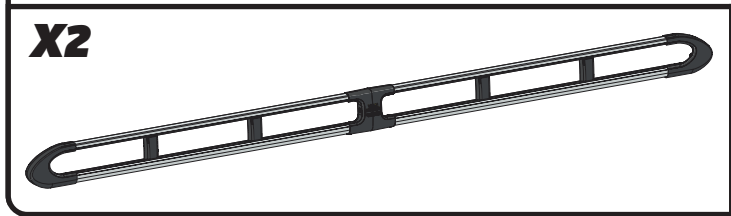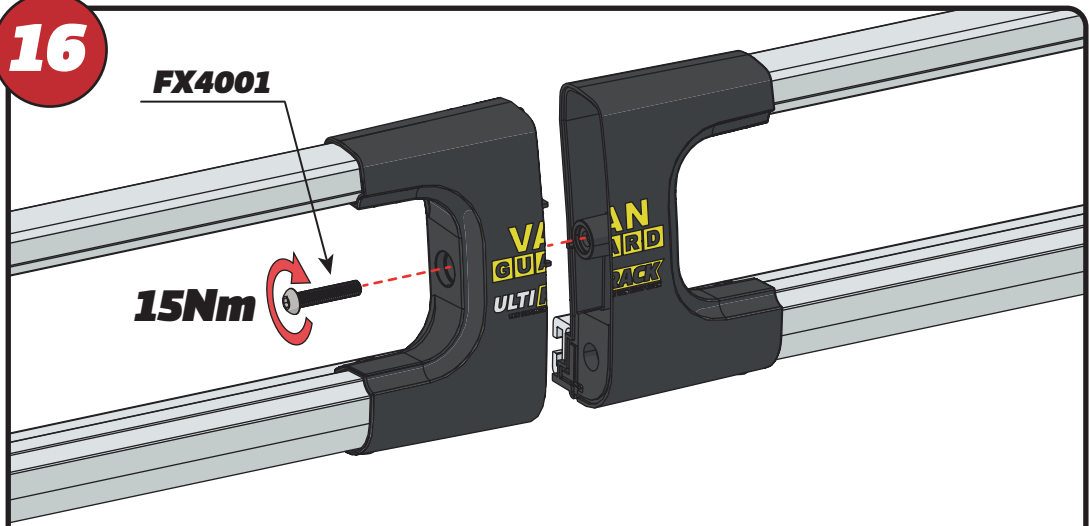


17

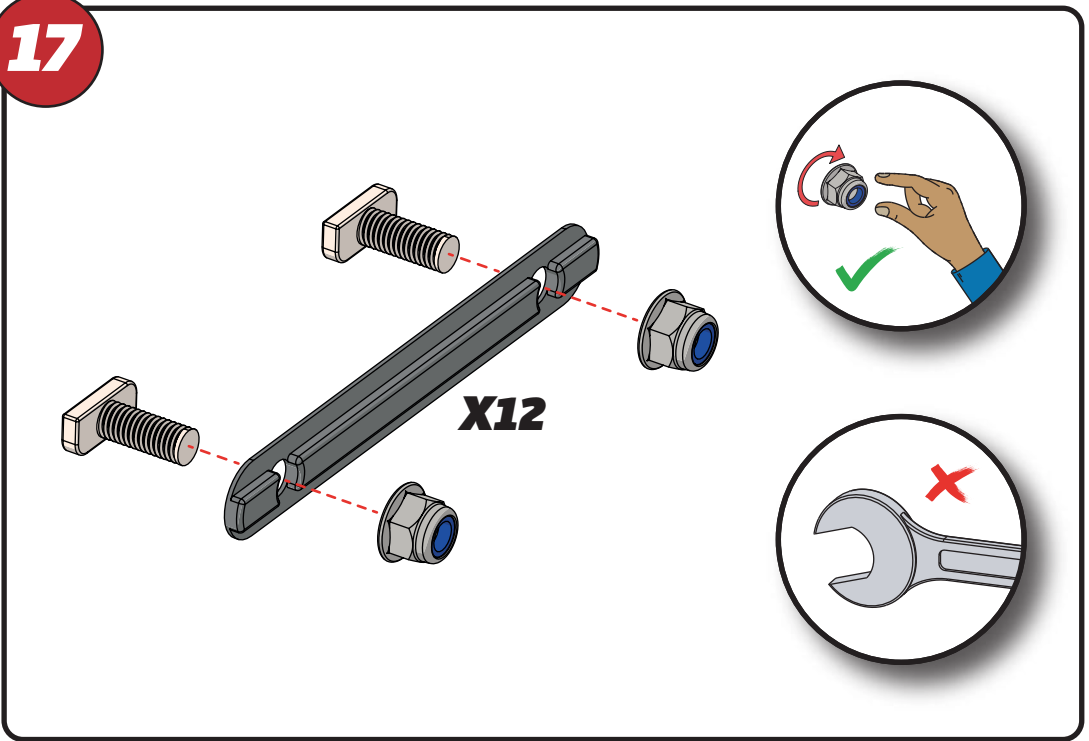




18

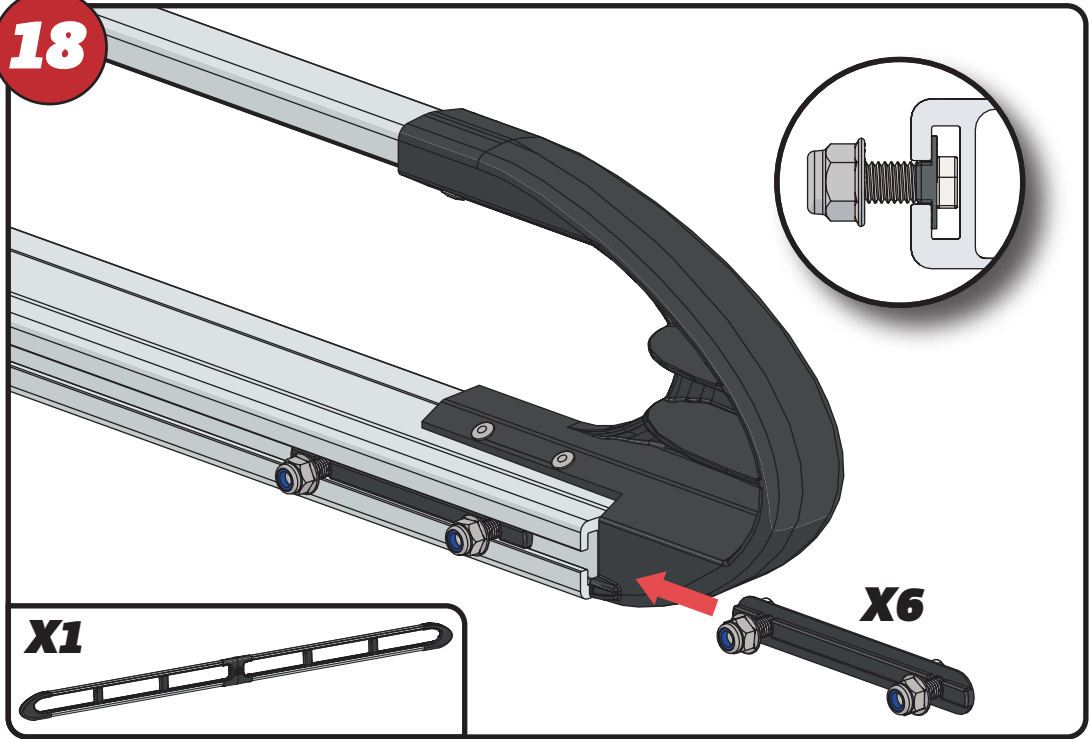


19

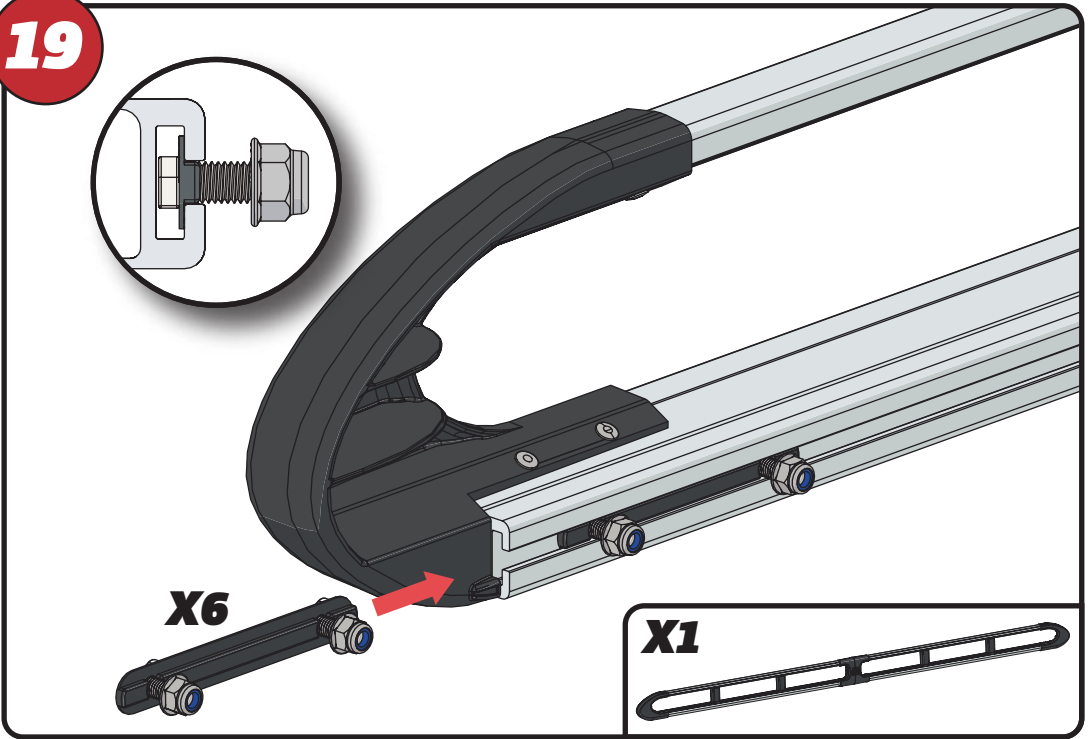


20

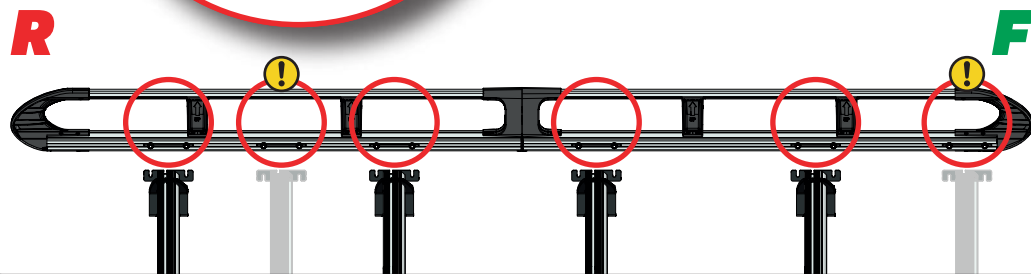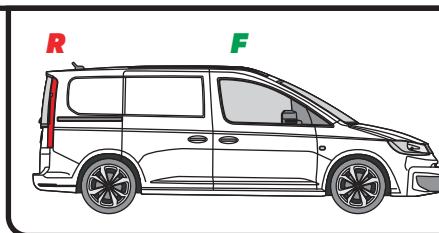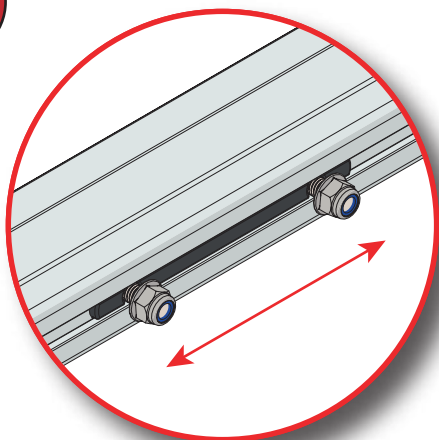


21

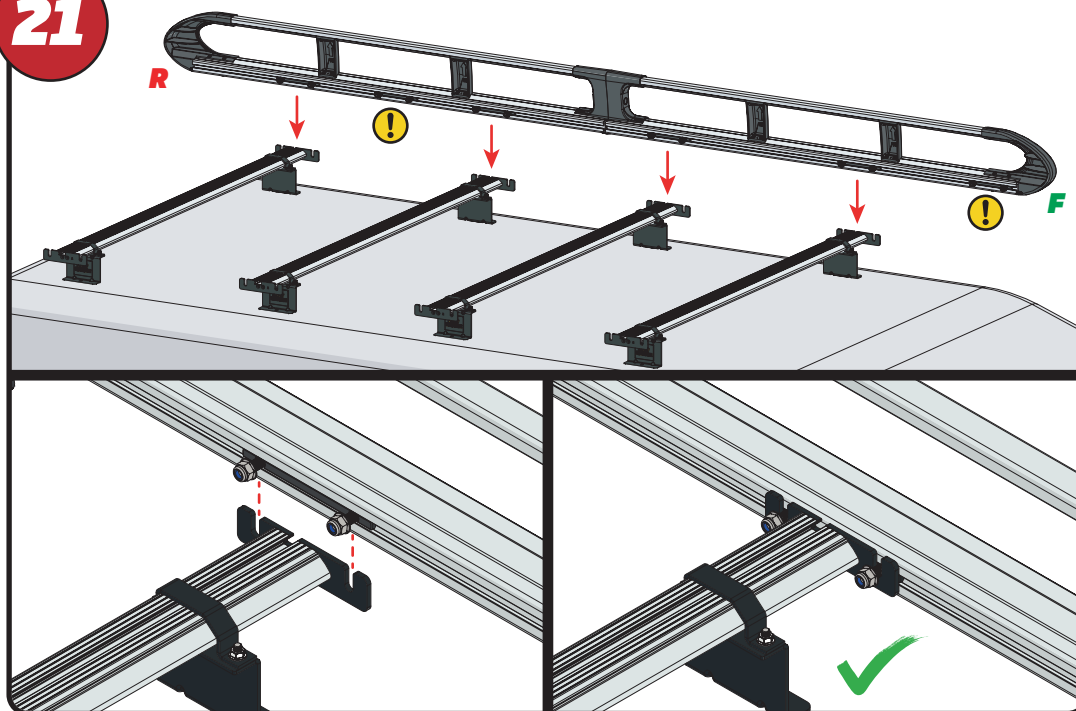



22

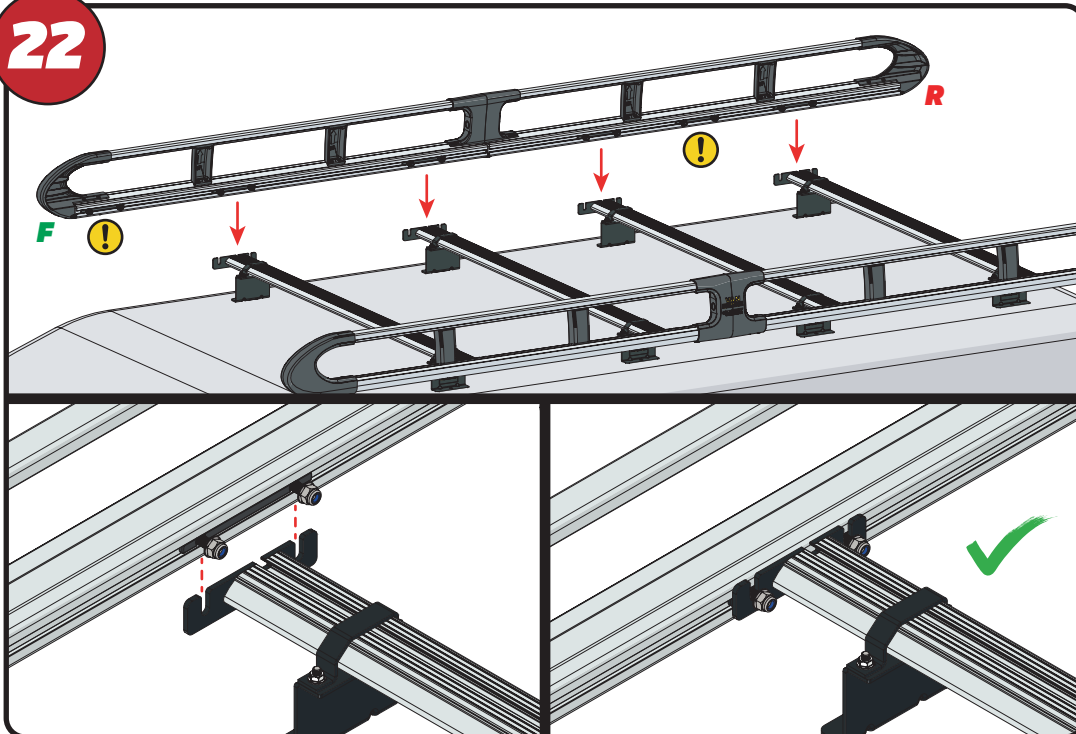

23

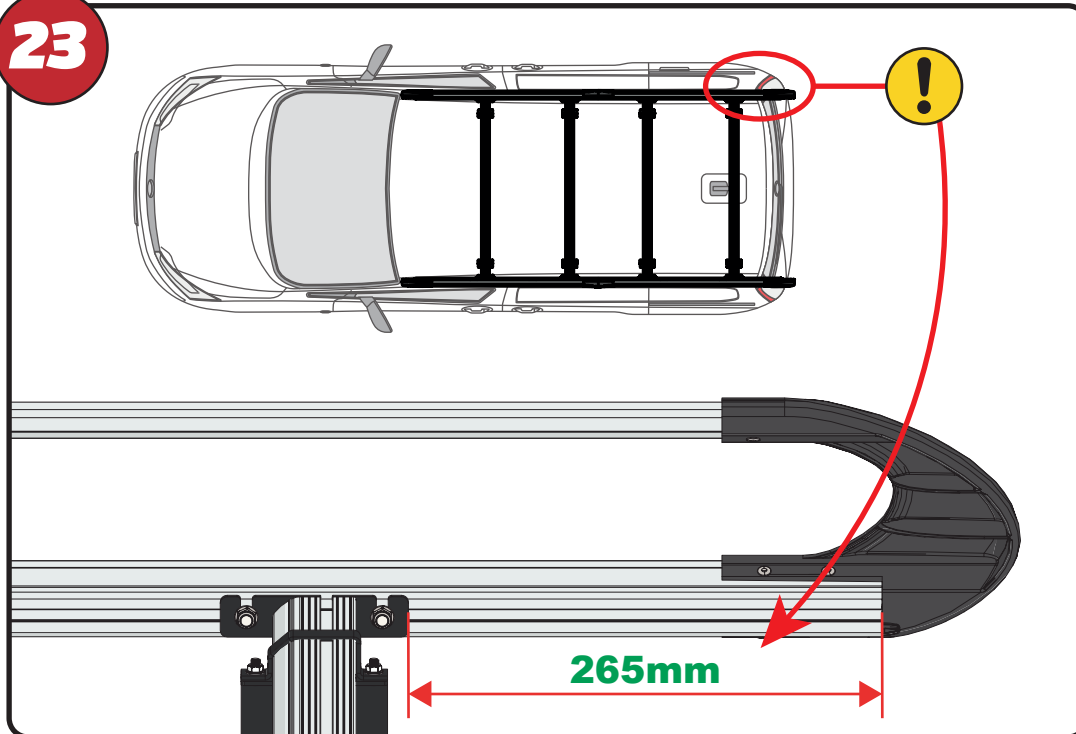


24

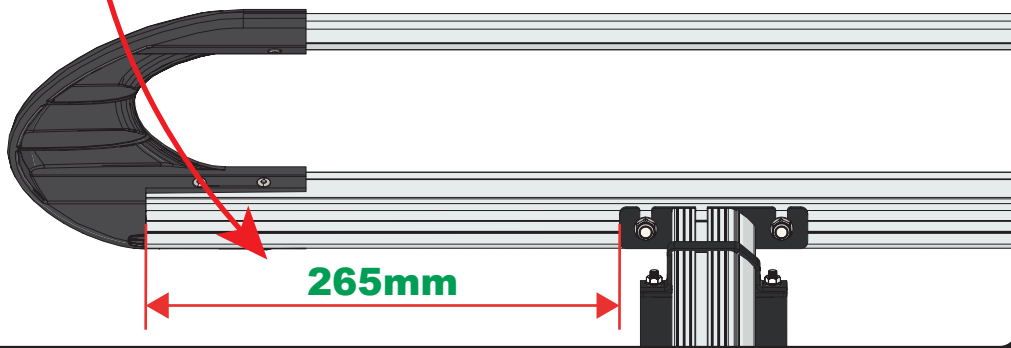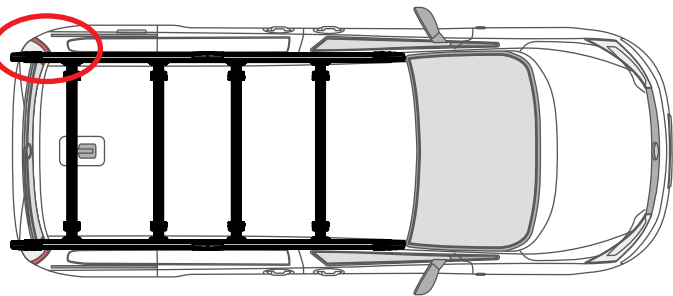

265mm

25

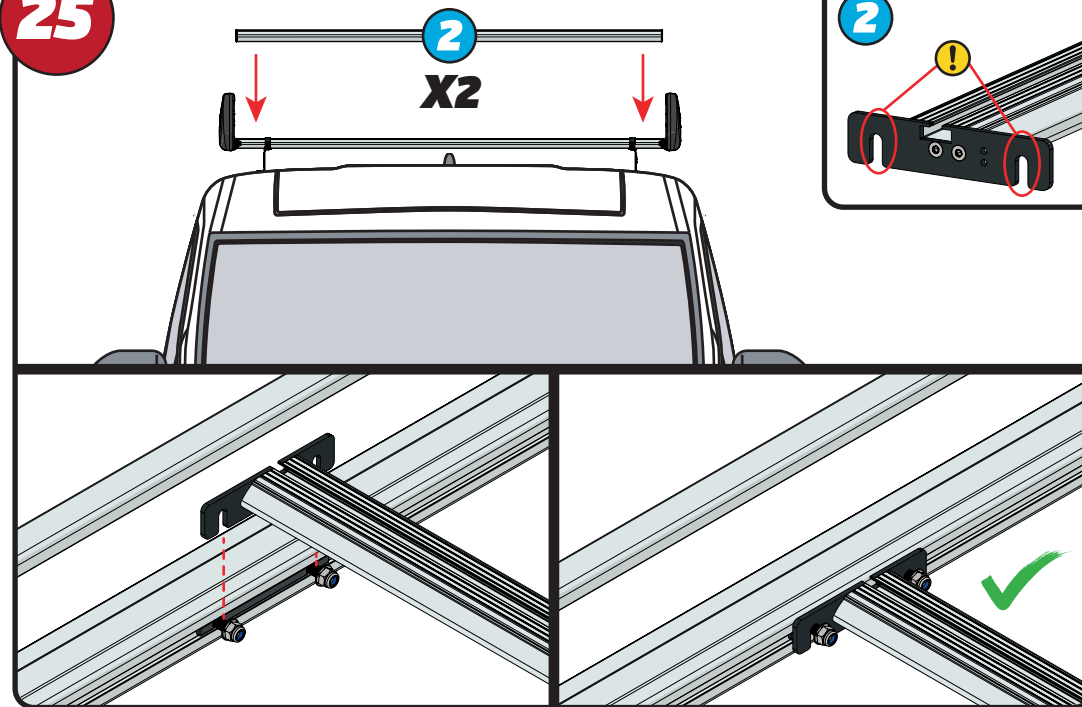



2

2
X2



26

XXX =
PAGE 2 OF 14

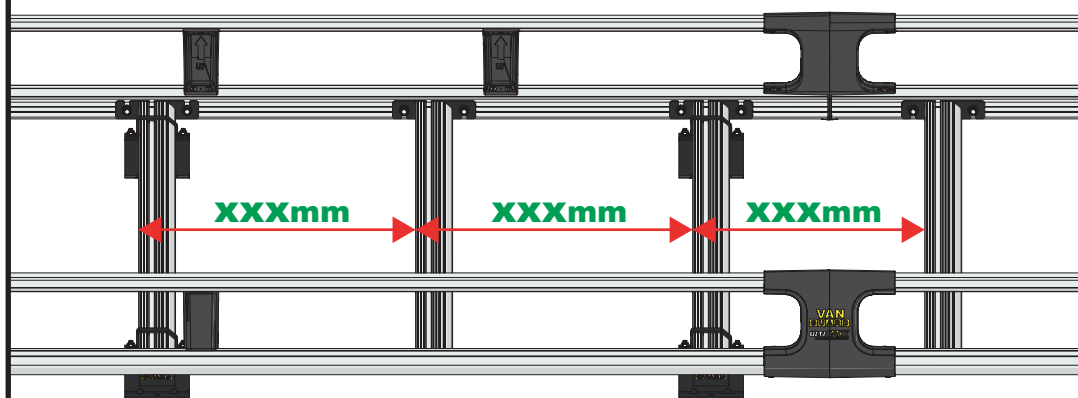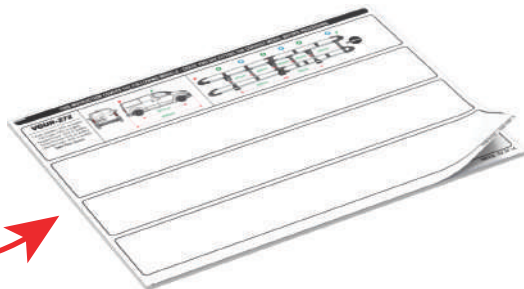


XXXmm

XXXmm

XXXmm

27

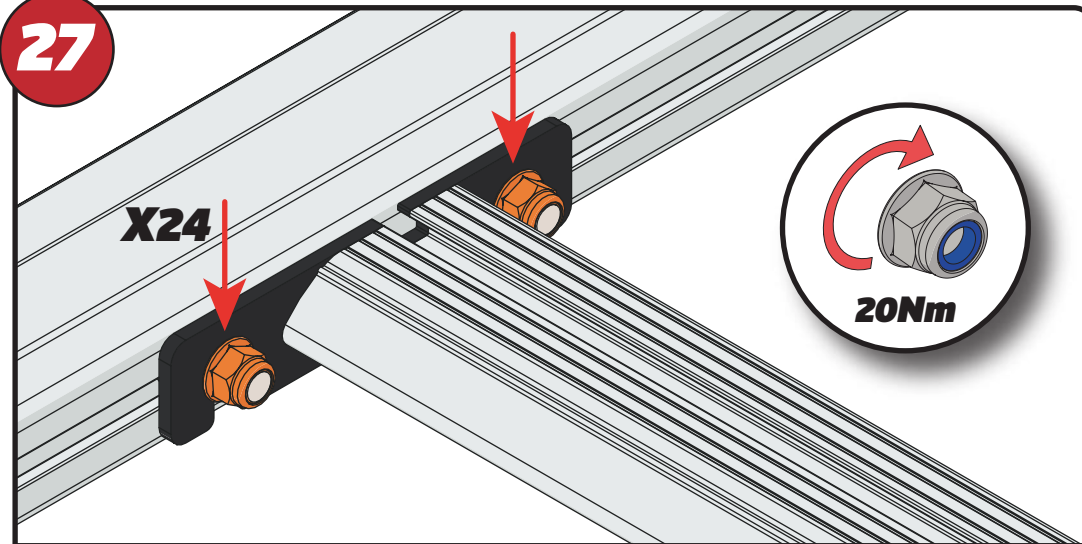


X24

20Nm



EN - TIGHTEN ALL OF THE CROSS BARS
DE - ALLE QUERSTANGEN FESTZIEHEN
FR - SERREZ TOUTES LES BARRES TRANSVERSALES
NL - DRAAI ALLE DWARSBALK VAN HET DAK AAN
ES - APIRIETE TODAS LAS BARRAS TRANSVERSALES
IT - STRINGERE TUTTE LE BARRE TRASVERSALI

SV - SKRU UPP ALLA KORSSTANGAR
DA - SKRU ALLE TAGBØJLER OP
NO - SKRU OPP ALLE TVERRSTENGER
PL - DOKRĘCIĆ WSZYSTKIE POPRZECZKI
CS - VŠECHNY PŘÍČNÉ TYČE SEŠROUJTE


28

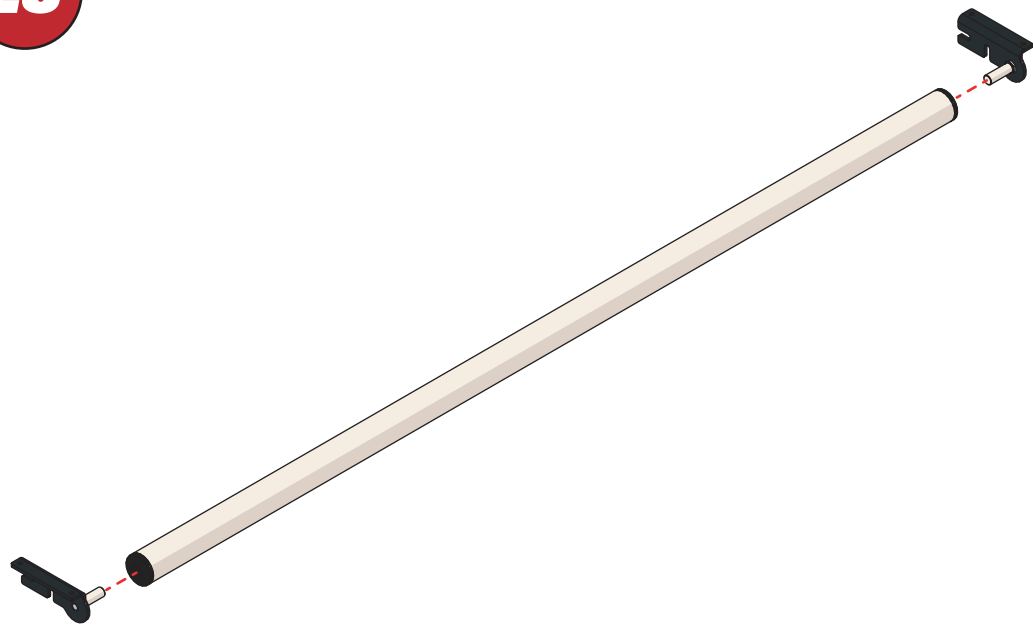


29

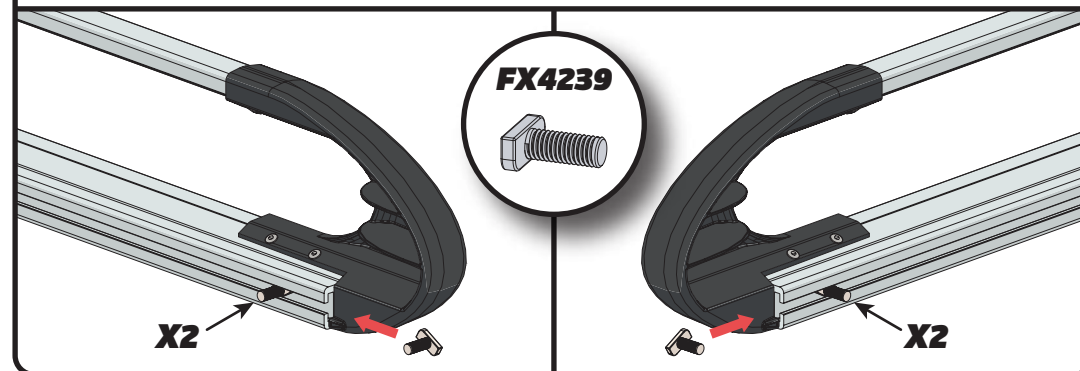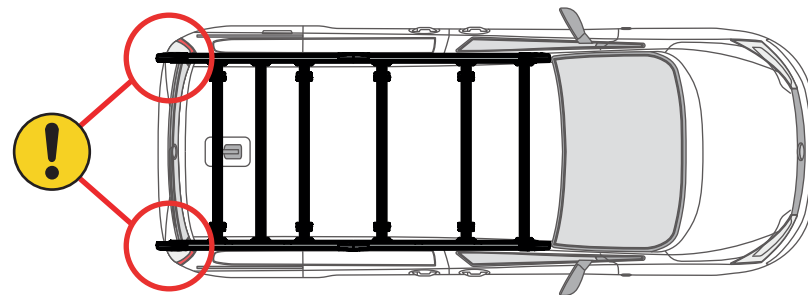


30

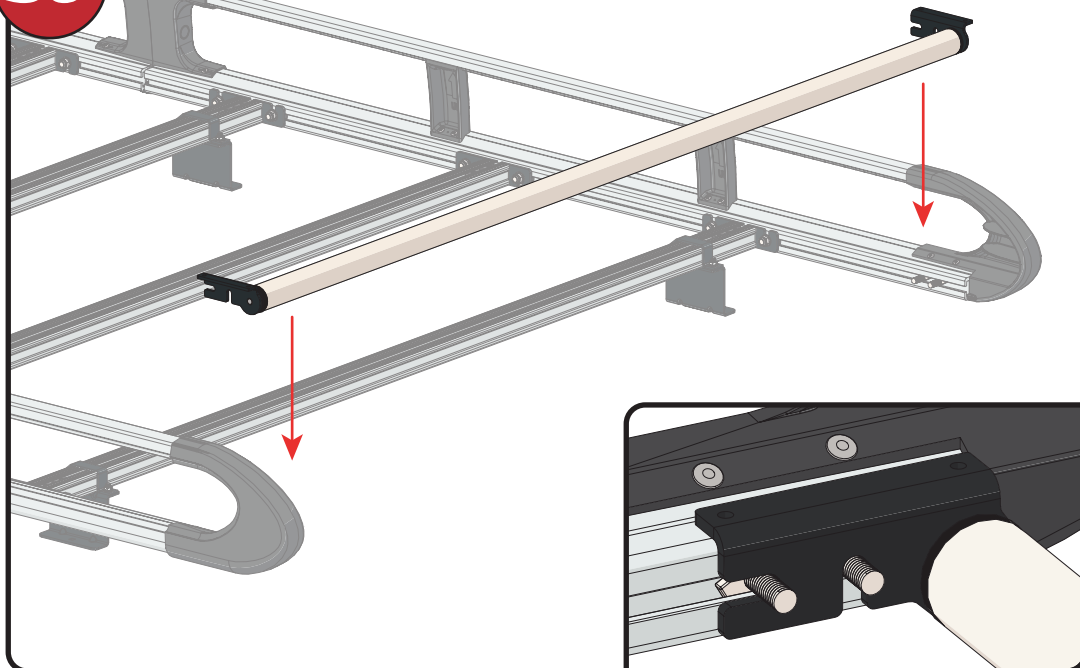


31

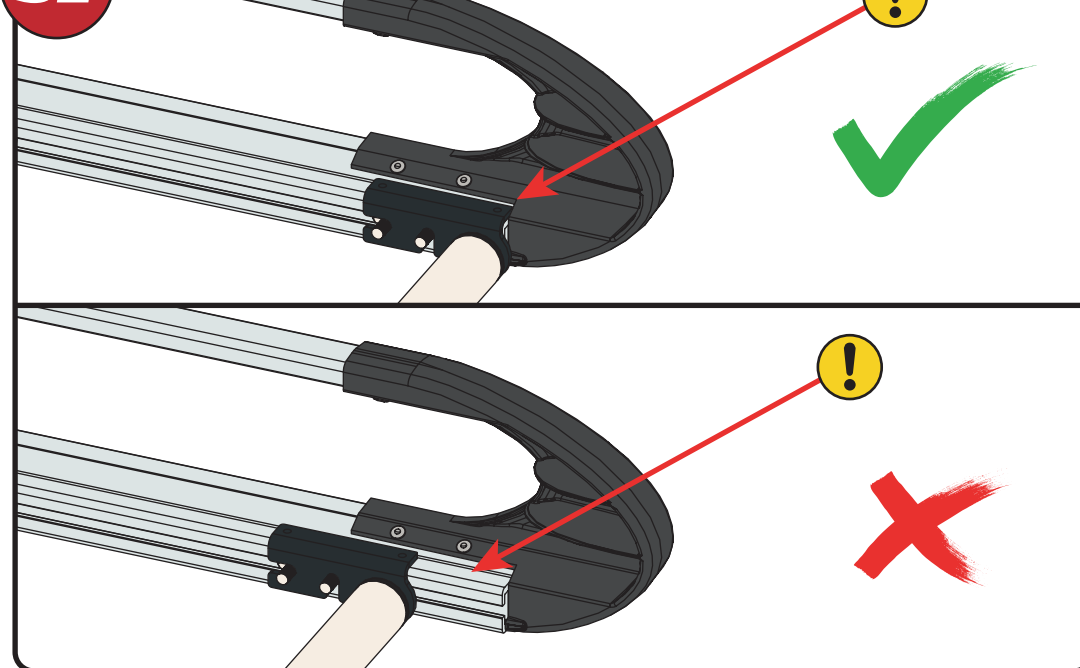


32

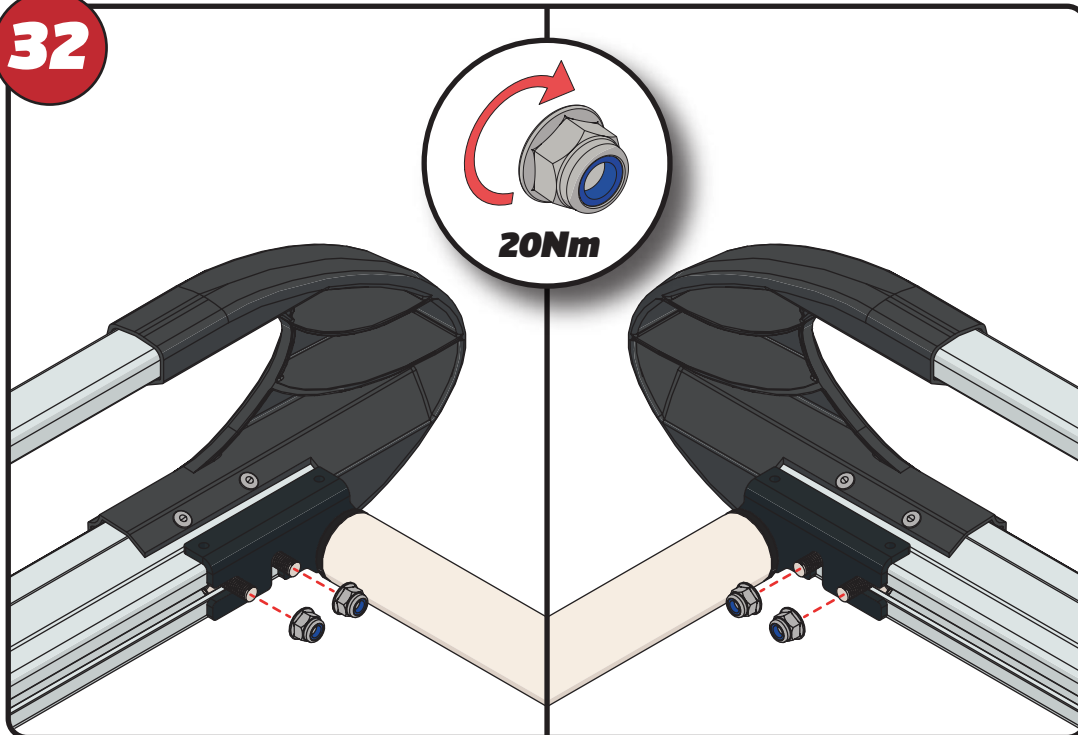


33

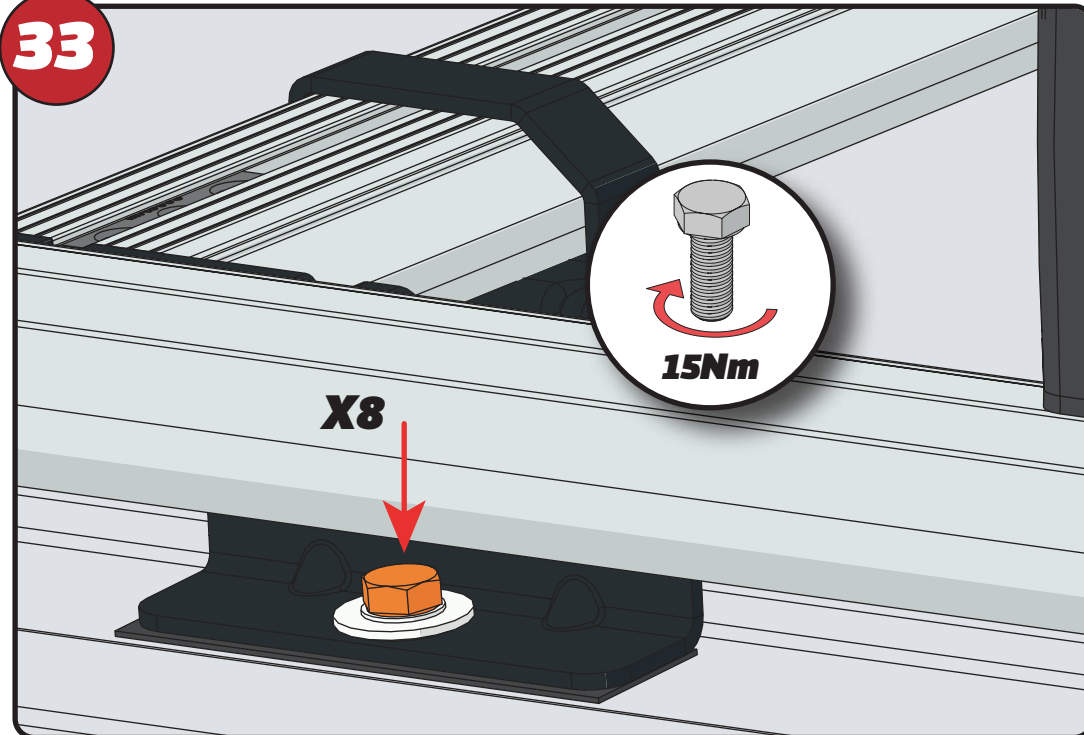

34

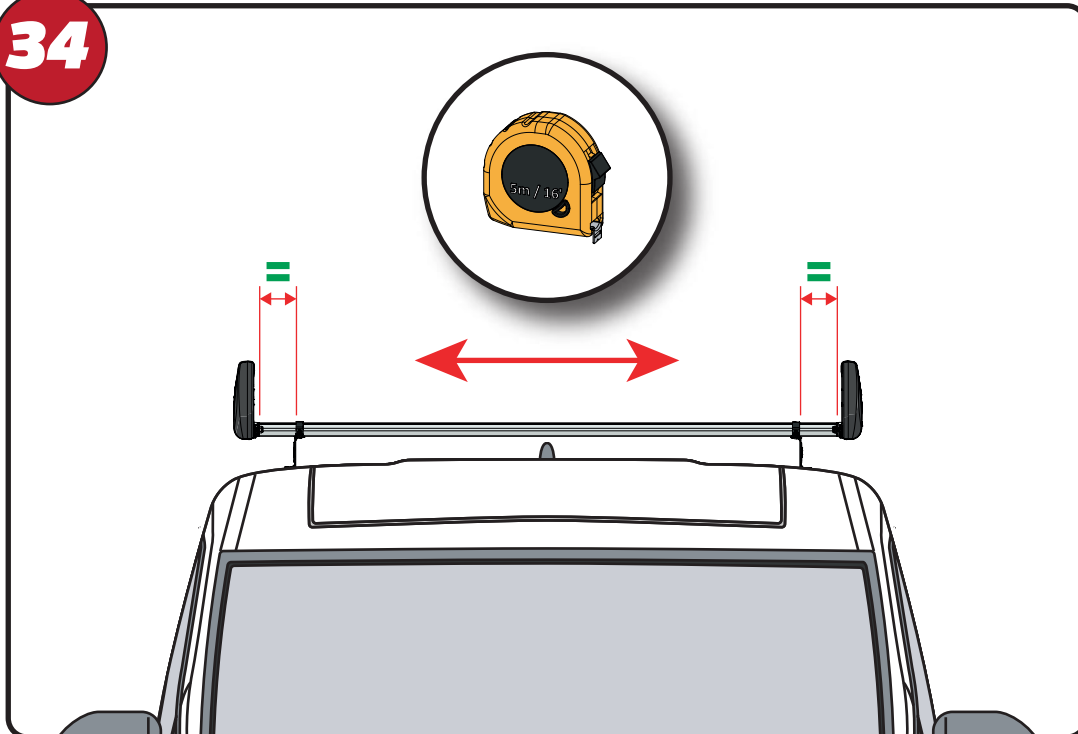


35

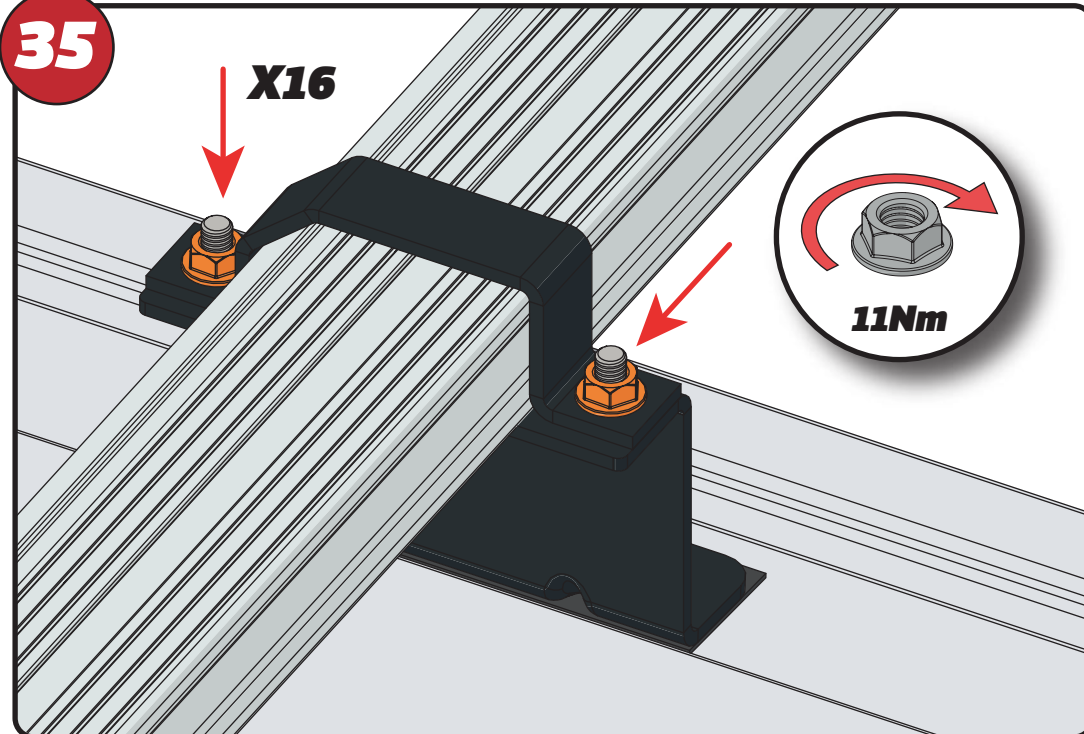

36




X28

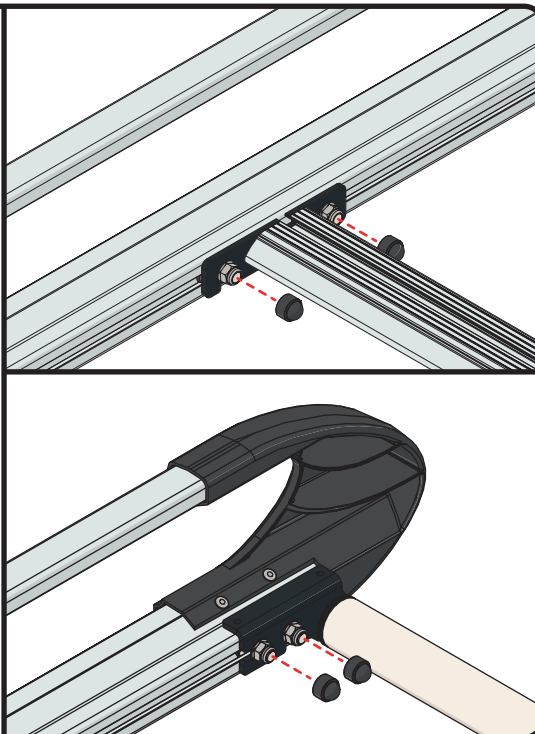


37



X8

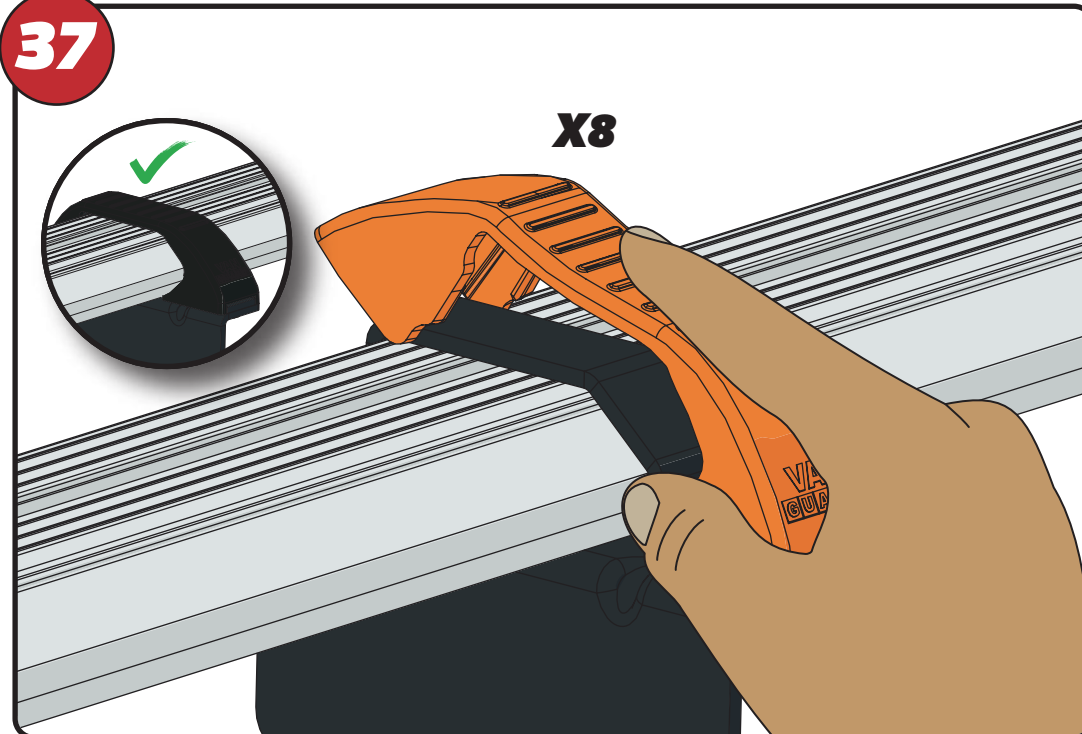

38

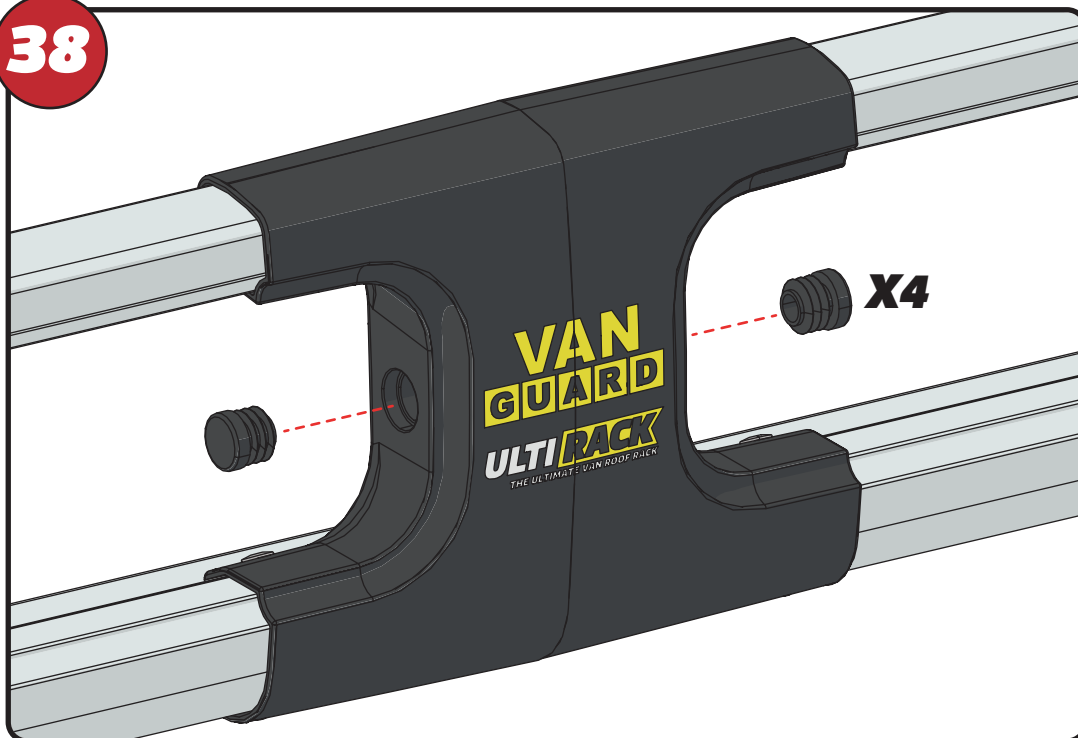

39

