




Fitting
Instruction

PRO-TLDV1

Item	Qty	Description	Item	Qty	Description
A	1	PRO-TLDV1 STEP	B	4	M14 x 55 Bolts & 2 Nyloc Nuts & 2 S/P Washers
			C	6	14 x 27 Flat Washers
			D	6	M14 Black Bolt Caps

- Using Item **B** with Item **C** loosely fix the Towbar crossmember between each side arm at the forward mounting point only leaving the fixing loose enough to enable you to slide Item **A** through the open slot.
- Using Item **B** with Item **C** fix Item **A** through the remaining fixing point into the Towbars captive nut.
- Fully tighten all fixings ensuring the Towbar and Pro-Step are rigid, square and secure.

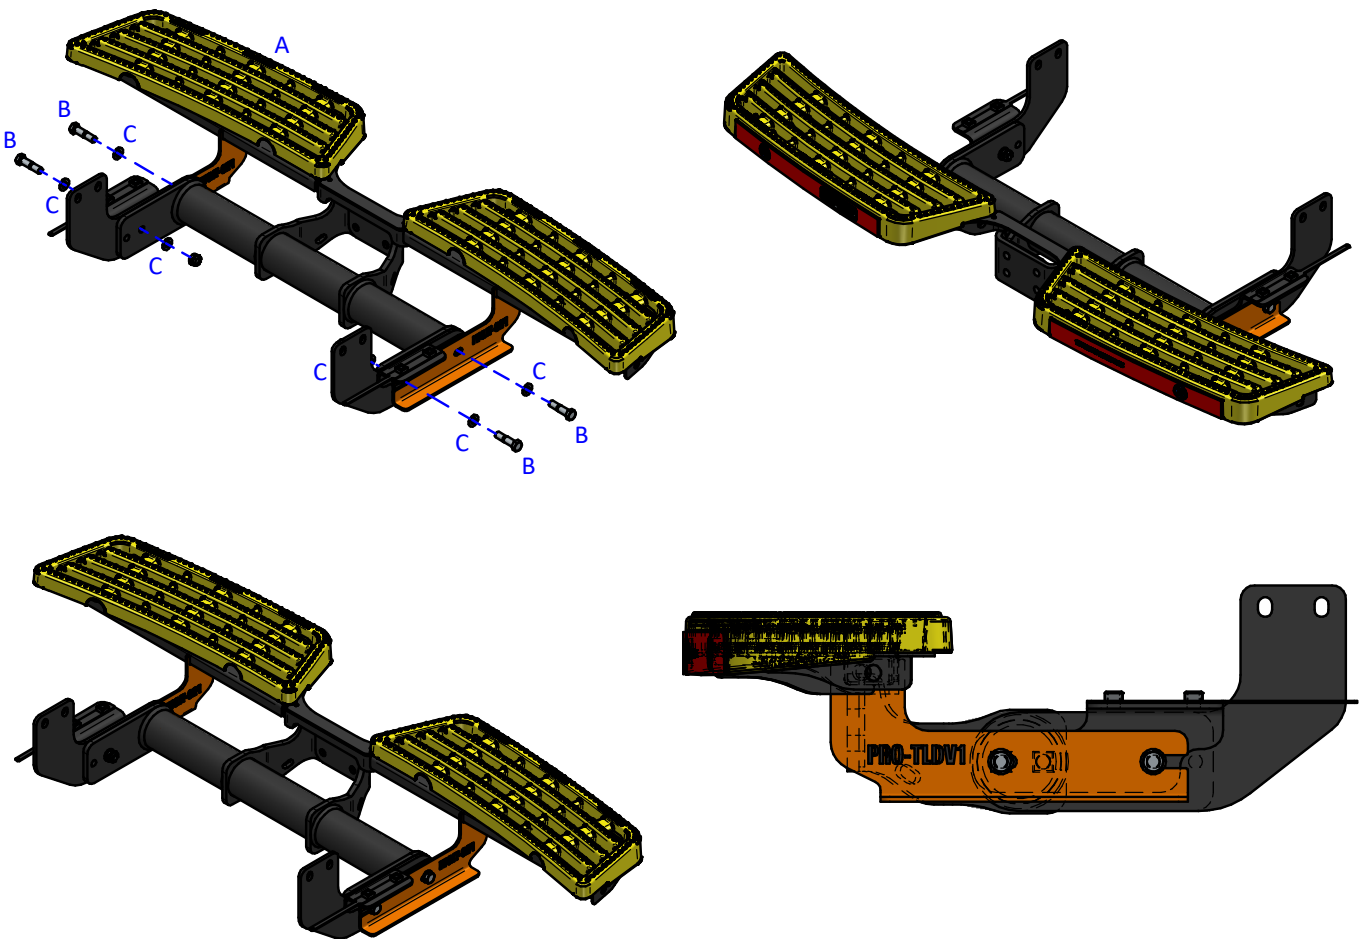

Notes:

- For Torque settings see general notes overleaf.