

Tow-Trust Towbars

Important: Please read General Notes overleaf before fitting Issue: 2

Fitting Instruction

TFD26 (V769) Ford Transit Courier, E-Courier & Courier Tourneo, E-Tourneo, (Titanium & Active Models) 2024>						
Item	Qty	Description	Item	Qty	Description	Torque Setting
А	1	TFD26 Crossbar	D	2	M16 x 50 Bolts & Nyloc Nuts	215 Nm
B1	1	Left Hand Side Arm	E	2	M12 x 40 Bolts & Nyloc Nuts	100 Nm
B2	1	Right Hand Side Arm	F	1	M12 x 120 (10.9) Bolt & Nyloc Nut	130 Nm
С	1	Extension	G	6	M8 x 35 (10.9) Bolts & S/P Washers	40 Nm
			Н	6	M12 x 35 Bolts, 4 Nyloc Nuts & 2 x S/P Washers	100 Nm
			J	6	8 x 25 (HD) Flat Washers	
			К	12	12 x 25 Flat Washers	
T1	1	30 O/D x 60 Long Tube	L	2	12 x 30 Flat Washers	

Bumper Removal:


Open the rear tailgate or barn doors and remove the four fixings from the rear panel. 1.

2. Remove the lower fixing from the wheel arch lining and the tip screw from each side.

- з. Remove the two fixings from the lower bumper edge.
- Unplug the wiring loom from the nearside, then pull the bumper out sideways and rearwards to remove. 4.
- Cut the bumper as shown in Figure 1 for all bumpers & Figure 2 for Active models with the additional exterior panel. 5.
- Remove the rear impact beam, six fixings. 6.
- 7. If the vehicle has the three-piece plastic inner bumper support remove the two outer sections by drilling out the rivets and detaching them as shown in Figures 3 & 4. Models with a one-piece plastic inner bumper support, drill out the rivets and cut the ends off using Figures 3 & 4 as a guide.

Ad-Blue Models Only:

- Carefully lower the Ad-Blue tank from the nearside chassis rail via the four fixings show in Figure 5 to gain access to the vertical mounting point for item B1. 1. Note: It may be necessary to temporarily release the filling pipes and wiring looms to enable the tank to be lowered. Always ensure the tank is supported.
- **Towbar Installation:**
 - 1. Loosely fix item A to the rear panel using items G with items J.
 - 2. Loosely fix items B1 & B2 inside each chassis rail using items H with items L.
 - 3. Loosely fix items B1 & B2 to item A using items H with items K.
 - 4. Fully tighten all the fixings ensuring the Towbar is rigid, square and secure.
 - 5. Refit the bumper and reconnect the wiring loom.
 - 6. Loosely fix item C to item A to the correct position shown in Figure 6 using items E with items K and item F with items K ensuring item T1 is fitted at the lower mounting point. Note: Active models will require items D installed facing rearwards before fixing item C.
 - 7. Loosely fix the desired ball bracket and wiring (Not supplied in this kit) to item C using item D.
 - 8. Fully tighten the remaining fixings ensuring item C is rigid, square and secure.

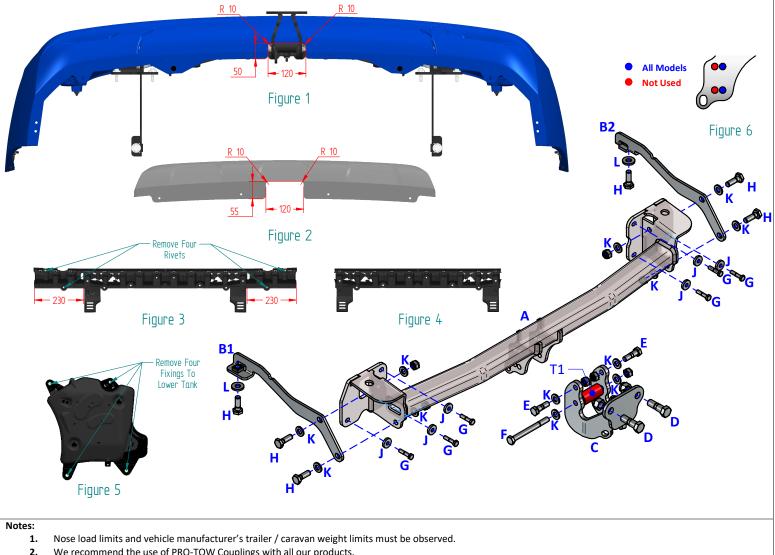

We recommend the use of PRO-TOW Couplings with all our products.