



Tow-Trust Towbars

Important: Please read General Notes overleaf before fitting




Issue 5

**TVW619 SEAT IBIZA HATCH 2002 - 2008 VW POLO 2002 - 2009
SKODA FABIA SAL 2001 – 2007
SKODA FABIA EST 2001> FABIA 2 EST 2008>
SKODA FABIA HATCH 2000> FABIA 2 HATCH 2007>**

Item	Qty	Description	Item	Qty	Description
A	1	Crossmember	C	2	M16 x 50 Bolts Nuts & S/P Washers
B	2	Side Arms	D	4	M10 x 35 Bolts & S/P Washers
			E	4	M12 x 35 Bolts, 2 Nuts & 4 S/P Washers
			F	4	10 x 40 Flat Washers
			G	6	12 x 25 Flat Washers

1. Remove bumper, (four screws around each wheel arch, one screw each side on the lower edge). Remove the lights and remove the two screws. Remove the steel bumper beam (this is not re-fitted).
2. Locate the two holes each side in the outside face of each chassis, (these are covered with tape).
3. Locate item B into the open ends of each chassis and using item D with item F loosely bolt item B into place.
4. Using item E with item G bolt item A to item B.
5. Fully tighten all nuts and bolts and ensure the towbar is rigid and secure.
6. Mark out two slots in the lower edge of the bumper (see sketch) and carefully remove.
7. Re-fit bumper.
8. Using item C bolt the ball bracket and wiring plate (not supplied in this kit) to the mounting plate.

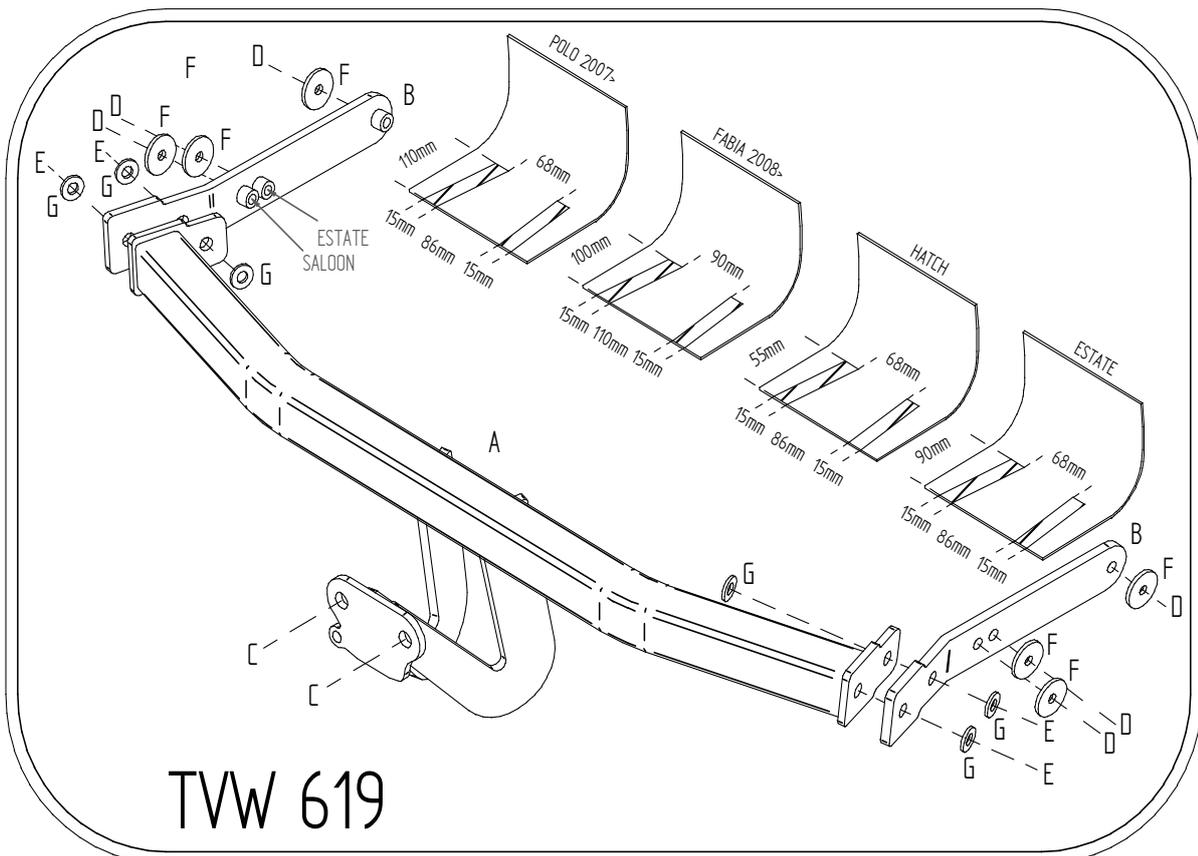

TVW 619

Note: nose load limits and vehicle manufacturer's trailer / caravan weight limits must be observed.